

Discharging Battery to the Grid Settings

SMILE-5 AL500 | SMILE-B3+ | SMILE-G3-S3.6/S5 | SMILE-S6 | SMILE-T10-HV



Discharging Batteries to the Grid





Login to the Alpha ESS online portal https://cloud.alphaess.com/ Click on the Cog on the left hand side and select "System Setup"






Discharging Batteries to the Grid



Configuration SMILE-5 AL500 | SMILE-B3+ | SMILE-G3-S3.6/S5 | SMILE-S6 | SMILE-T10-HV

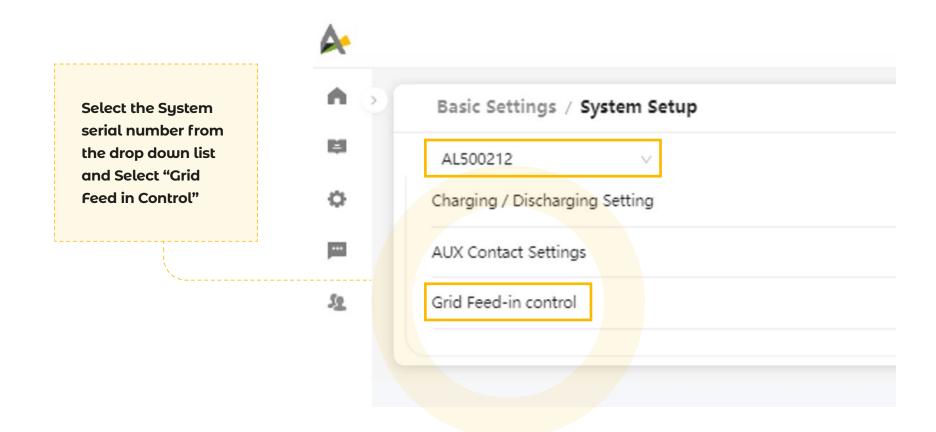




Discharging Batteries to the Grid





To Enable:

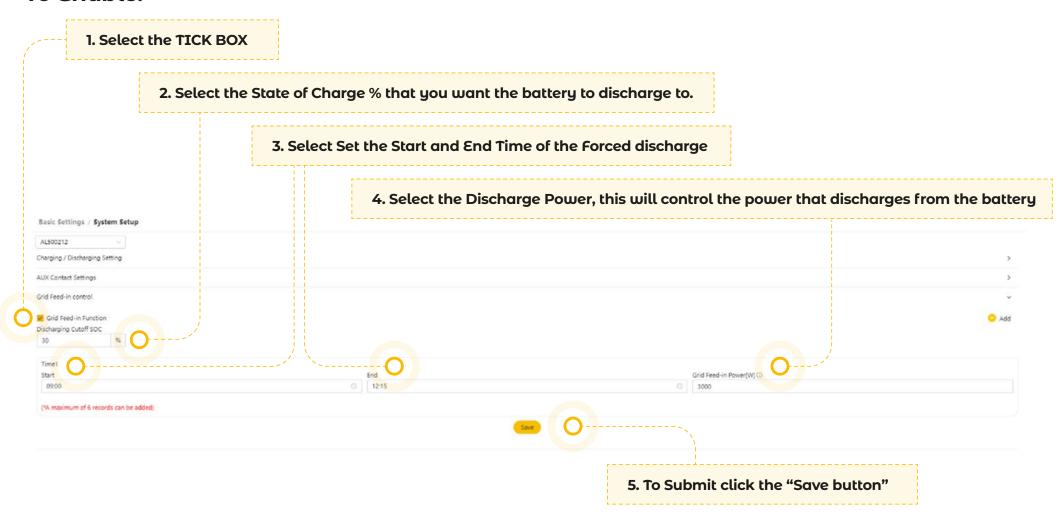

STEP FOUR

Discharging Batteries to the Grid





AL500212: harging / Discharging Setting UX Contact Settings					,
ALS00212: V ALS00212 V ALSO Contact Settings and Feed-in control					,
arging / Discharging Setting IX Contact Settings					>
IX Contact Settings					>
					,
Feed-in control					
Grid Feed-in Function				``	O Add
charging Cutoff SOC 0 96					
me1					Delete
art	End		Grid Feed-in Power(W) (i)		
09:00	① 12:15	0	3000		
me2					Delete
art	End		Grid Feed-in Power[W] ①		
00:00	③ 00:15	0	0		



AlphaESS UK

Suite 4F, Regus House, Herons Way, Chester Business Park, Chester, Cheshire, United Kingdom. CH4 9QR



